

www.xxy.eu

BLUEWAVE 10

User Guide

EN USER GUIDE

BLUEWAVE 10 BLUETOOTH HEADPHONES

IISE

- Compatible with mobile phones and other mobile devices (including iPhone and iPad) supporting Bluetooth function.
 Plays music, answers incoming calls wirelessly.
- Compatible with PC computers supporting Bluetooth function (or Bluetooth USB adapter). Plays music or sounds from multimedia files wirelessly.

BATTERY CHARGE

The headphones are powered by a built-in lithium-ion battery. To charge the battery, connect the headphones to the computer with a USB cable supplied. Using a car charger is not recommended during the first battery charge. The battery run time is up to 10 hours.

KEY FUNCTIONS



- S1: Multifunction key, On/Off, Answer call/End call, Reject incoming call, Call back
- S2: Previous: Play the previous track
- S3: Next: Play the next track,
- S4: Volume down
- S5: Volume up
- S6: Start/Pause

PAIRING WITH BLUETOOTH SUPPORTING DEVICES

Pairing is linking Bluetooth capable devices to establish permanent and secure connection allowing fast data transfer between the devices without each time entering a password.

- Press and hold S1 button for about 2 seconds. Now the device is in paring mode and ready to be detected by other Bluetooth capable devices.
- Activate Bluetooth function of the mobile phone/tablet/computer you want to pair with Bluewave 10. Refer to the mobile phone/tablet/computer's manual if needed. The headphones will be detected as "Bluewave 10".
- 3. Select and confirm your Bluewave 10 out of those searched devices per the mobile phone/tablet/computer's manual.
- 4. The pairing is complete. If the pairing process is unsuccessful, please repeat steps 1 to 4.

SWITCH ON AND OFF

SWITCH ON

Press and hold S1 button for 2 seconds. The device and a previously paired mobile/tablet/computer (with activated Bluetooth function) will connect automatically.

SWITCH OFF

Press and hold S1 button for 1 second

USE

After the headphones and a mobile phone/tablet/computer are paired, you can answer calls and talk (mobile only) and listen to music and sounds from the multimedia wirelessly.

DEDIA

Double press S1 key to redial the number you last called. To end call, press S1 key shortly.

ANSWER THE CALL

Press S1 key shortly.

END THE CALL

Press S1 key shortly again to end your call.

REJECT THE CALL

Press and hold S1 button for 1 second.

DURING THE CALL

Volume adjustment: Increase or decrease the sound level by pressing S4 or S5 key respectively. Press and hold the keys for smooth volume adjustment. Ending vour call: press S1 key shortly to end call.

PLAYING MUSIC FROM YOUR MOBILE

Go to the previous track: press S2 key shortly Go to the next track: press S3 key shortly Pause/Restart: press S6 key shortly