

XX.Y®

HEADPHONES

www.xxy.eu


DYNAMIC 10

User guide

STEREO HEADPHONES DYNAMIC 10

Stereo headphones with built in MP3 player for Micro SD/SDHC card (not included) and FM radio. Now you can take music to any place without carrying additional equipment. You don't need any cable, either!

KEY FUNCTIONS

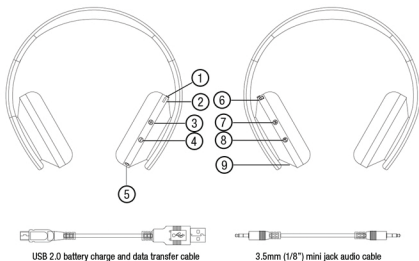

- ① **ON/OFF SWITCH**
To switch the built-in MP3/WMA player or FM radio, toggle the switch to ON position. The diode glows blue showing that the device is active. For using external sound sources connect the audio cable and toggle the switch to OFF position.

MP3 PLAYER

- ② **MICRO SD/SDHC CARD PORT**
Once the card is inserted the player will automatically list and play MP3 and WMA files (if on). The directories and subdirectories are listed in alphabetic order (the names of the directories followed by the names of files) to the 10th level deep.

NOTE: The device accepts cards with a maximum capacity of 32GB.

③ **NEXT TRACK, VOLUME UP**

Press the button to move to the next track. Press and hold to increase volume.

④ **PREVIOUS TRACK, VOLUME DOWN**

Press the button to move to the previous track. Press and hold to decrease volume.

⑤ **AUDIO INPUT: 3.5mm (1/8") MINI JACK**

Connect your headphones to the external sound source (MP3 player, notebook, mobile phone) for a traditional listening experience. The headphones are not powered by batteries then.

⑥ **USB PORT**

Connect your headphones to a notebook or other device with a USB port to charge the in-built battery. The charging time is approx. 2 hours. Plug in the headphones with the inserted Micro SD/SDHC card to the computer USB port to allow data transfer. The headphones ON/OFF switch must be in ON position. Once inserted the headphones card will be automatically detected and installed.

NOTE: Depending on the type of drivers supplied by the hardware manufacturer, in some cases the card in the headphones may be properly detected and installed only if connected to the USB 2.0 port.

FM RADIO

③ **NEXT RADIO STATION**

Press the button to move to the next saved radio station. Press and hold to increase volume.

④ **PREVIOUS RADIO STATION**

Press the button to move to the previous saved radio station. Press and hold to decrease volume.

⑦ **FUNCTION KEY**

Press the key to toggle between FM radio and MP3 player.

⑧ **PLAY/PAUSE**

Press and hold the button to start the search for radio stations. Radio stations will be automatically saved during the search. Press buttons 3 and 4 to select the saved radio stations.

⑨ **LED INDICATOR**

The diode glows blue showing that the device is active. Low battery is indicated by blinking red light.