

XX.Y®


HEADPHONES



www.xxy.eu

DYNAMIC 40

User Guide


PLAYING MP3 FILES FROM MICRO SD/SDHC CARD


Insert the Micro SD/SDHC Card (max. 32GB - not included) to port and turn the device on by setting the switch to the ON position. By default the headphones will start playing tracks from the card. The right diode will start glowing blue. The right diode will slowly pulse blue while the music is on. Press  to stop or play music again.

Press   to move to the next or previous track.

Press and hold Vol + / Vol - to increase or decrease volume.

FM RADIO

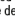 
Press and hold  to switch between MP3 and FM radio. If the micro SD/SDHC card is not inserted, FM radio will be automatically activated.

Press  to activate automatic radio station search and saving. Radio station search is indicated by diode light pulsating blue. Once the search is complete, the diode will start glowing.

Press   to move to the next or previous saved station.

Press and hold Vol + / Vol - to increase or decrease volume.

PLAYING FROM AN EXTERNAL DEVICE

DYNAMIC 40 headphones can be connected to an external sound source via mini jack cable attached to the set. Once the cable is inserted to the mini jack port, the headphones will automatically switch to the external source. By pressing and holding  the device will toggle between the micro SD/SDHC card, FM radio and the external sound source.

EQUALIZER

Drücken Sie die Taste EQ, um die Equalizer-Einstellung zwischen den verfügbaren Modi zu wechseln: Jazz/Rock/Pop/Classic/Bas/ausgeschaltet.

LOUDSPEAKER

DYNAMIC 40 headphones can work as a speaker in all of the above modes. Use the toggle to switch to the speaker mode.

NOTE: Do not put the headphones on if the speaker mode is on! Maximum volume can damage your hearing.

FILE TRANSFER/CARD READER

Connect the headphones to a laptop with a USB cable (attached) to transfer files. If the micro SD/SDHC card is inserted, the device will be automatically recognised by the system as mass storage. From now on files can be transferred and/or copied between the computer and the card.

CHARGING A BUILT-IN BATTERY

Connect the headphones to a laptop with a USB cable (attached) to start charging. The right diode glows red showing that the device is charging.

CHARGING EXTERNAL BATTERY

Connect external battery to a laptop with a USB cable (attached) to start charging. You can use an external battery as an additional source of energy to use and charge the headphones.