

XX.Y®


HEADPHONES



 

www.xxy.eu

RUNNER 10


User Guide


PLAYING MP3 FROM THE MICRO SD/SDHC CARD




 
Insert the micro SD/SDHC card (not included) to the port and turn the device on. By default the headphones will start playing tracks from the card. The right diode will start glowing blue. The right diode will slowly pulse blue while the music is on. Press  to stop or start playing music.

Press   to move to the next or previous track.
Press and hold   to increase or decrease volume.

 
FM RADIO

Press and hold  to switch between MP3 and FM radio. If the micro SD/SDHC card is not inserted, FM radio will be automatically activated.

Press  to activate automatic radio station search and saving. Radio station search is indicated by diode light pulsating blue. Once the search is complete, the diode will start glowing.

Press   to move to the next or previous saved station.
Press and hold   to increase or decrease volume.

EXTERNAL SOUND SOURCE

RUNNER 10 headphones can be connected to an external sound source via mini jack cable (mini USB) attached to the set. Once the headphones are connected to the external device, press and hold  to switch to the LINE IN mode.

NOTE: *The headphones must be on while using the external sound source.*

EQUALIZER

Press EQ to toggle between the different equalizer modes: Jazz/Rock/Pop/Classic/Bas/Off

CHARGING A BUILT-IN BATTERY

Connect the headphones to a laptop with a USB cable (attached) to start charging. The right diode glows red showing that the device is charging.

MAXIMUM VOLUME LEVEL

For safety reasons RUNNER 10 headphones have a sound level limiter to prevent blocking out external noises during work-out.